



FLOOD ANGEL®

# Airbrick Covers



KM563624




UK Flood Barriers Limited  
Unit 1 Site 9a  
Wassage Way  
Hampton Lovett Industrial Estate  
Droitwich  
Worcestershire  
WR9 0NX


Telephone:  
**01905 773282**  
Facsimile:  
**01905 775037**  
Email:  
**[enquiries@ukfloodbarriers.co.uk](mailto:enquiries@ukfloodbarriers.co.uk)**  
Online:  
**[www.ukfloodbarriers.co.uk](http://www.ukfloodbarriers.co.uk)**

## Instructions for use

1. To determine the airbrick holes the cover will sit over, offer the cover to the airbrick in the first instance. Insert the anchor bolt in the airbrick hole, repeat on the second bolt.

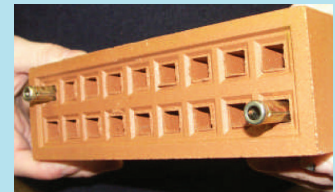


2. With a hammer **gently** tap the anchor bolt into the brick, as far as possible.

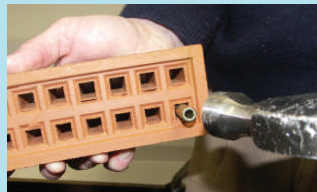



3. Once the anchor bolts are in place, insert the threaded bar into each of the anchor bolts, by turning in a clockwise rotation. Leaving approx 25mm (1 inch of thread) protruding. Insert the aluminium washer over the threaded bar and offer the sealing plate up to the bars.



4. Place the rubber washer over the threaded bar. Repeat on the other side.

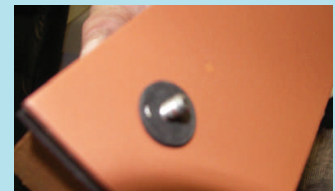

5. Place the hand wheel onto the threaded bar and turn in a clockwise direction. Repeat on the other side. Once both wheels are in place turn the wheels again to tighten.

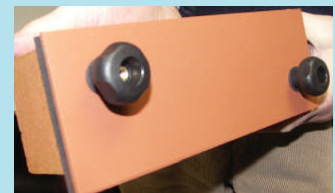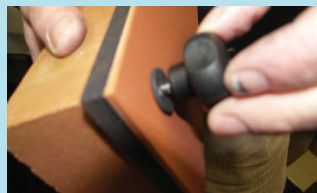

**NB.** Once flooding has subsided remove the plate by reversing the operation. The anchor bolt will remain in the wall for future use all other parts should be reassembled together and kept in a safe place for future use.